


Tormek Gouge Sharpeing Jig Setter

Paste template to a piece of 18mm MDF or similar.
Drill 8mm holes at the corners, which are need for
clearence at the angle of the jig.

Then cut as accurately as possible
along the lines.

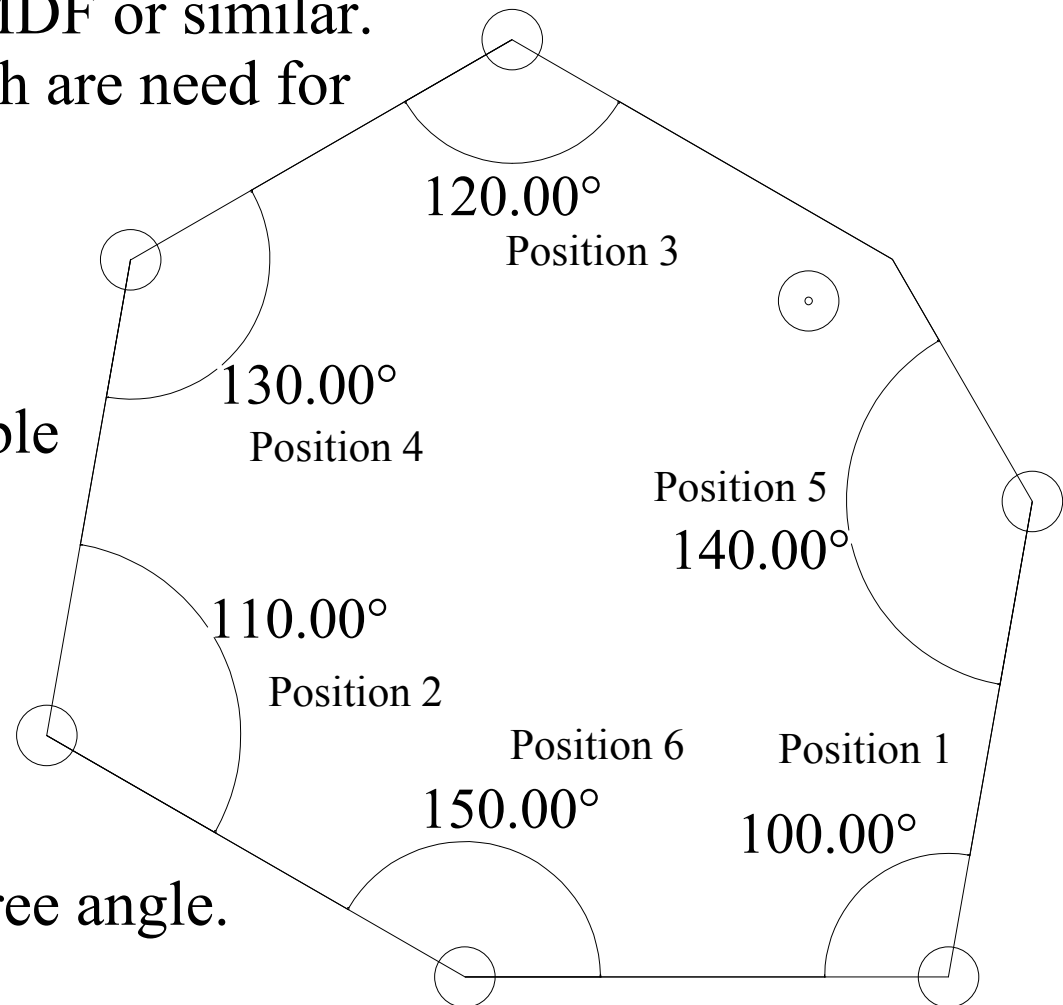

Position 0 is just a 90 degree angle.

